

# ***Acesonic***

The Leader in Professional Equipment



## **UHF-1208X**

DUAL DIVERSITY 100 CHANNELS

UHF WIRELESS MICROPHONE SYSTEM



## **USER'S MANUAL**

**NOTE:**

To ensure this component will work safely and to its fullest potential, please read this user's manual carefully before operation and keep for future reference.

[www.acesonic.com](http://www.acesonic.com)

# Warnings, Cautions and Others

## Mises en garde, precautions et indications diverses



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### CAUTION

To reduce the risk of electrical shocks, fire, etc:

1. Do not remove screws, screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### FCC INFORMATION (U.S.A.)

1. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.  
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.
2. **IMPORTANT:** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable(s) supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use product in the U. S. A.

### For Canada/Pour le Canada

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT.

**ATTENTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

### For Canada/Pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FORM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED DIGITAL APPARATUS, ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS. CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIO ELECTRIQUES APPLICABLES AUX APPAREILS NUMERQUES DE CLASSE B PRESCRITES DANS LA NORMESUR LE MATERIEL BROUILLEUR: APPAREILS NUMERQUES , NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

### Caution

Disconnect the electrical plug to shut off power completely. The POWER on the unit is not off from the electrical plug when the POWER button on the front panel is not pressed in.

## Important Safety Instructions

1. **Read** These Instructions.
2. **Keep** These Instructions.
3. **Heed** All Warnings.
4. **Follow** All Instructions.
5. **Do not** use this product near water.
6. **Clean** only with dry cloth.
7. **Do not** block any ventilation openings.
8. **Do not** install near any heat sources such as radiators, heat register, stoves, or other apparatus (including amplifiers) that produce heat.
9. **Do not** defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Protect** the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. **Only** use attachments and accessories specified by the manufacturer.
12. **Use** only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart.
13. **Unplug** this apparatus during lightning storms or unused for long period of time. Apparatus combination to avoid injury from tip-cover.
14. **Refer** all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **This product should be operated only from the type of power source indicated on the marking label.** If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
16. **Protective Attachment Plug**  
The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
17. **Power Lines**  
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



## 18. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

## 19. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

## 20. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

## 21. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## 22. Wall or Ceiling Mounting


The product should be mounted to a wall or ceiling only as recommended by the manufacturer. Any mounting of the product should follow the manufacturer instructions, and should use a mounting accessory recommended by the manufacturer.

## 23. Wet location marking

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## 24. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure below.

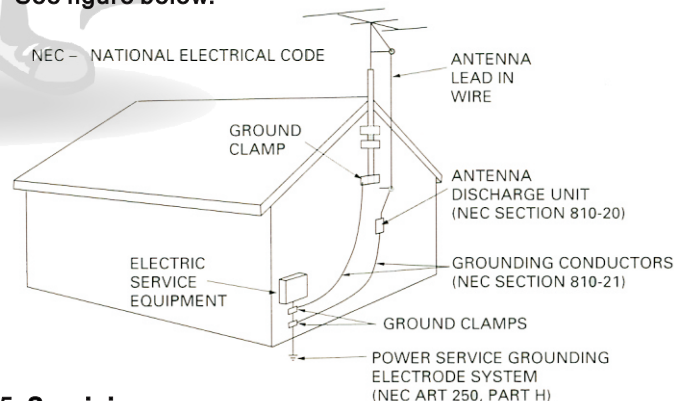

## 25. Servicing

If your product is not operating correctly or exhibits a marked change in performance and you are unable to restore normal operation by following the detailed procedure in its operating instructions, do not attempt to service it yourself as operating instructions, do not attempt to service it yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personal.

# Acesonic UHF-1208X

Thank you for purchasing Acesonic's UHF-1208X. Acesonic takes pride in providing our customers with only the most advanced and highest quality karaoke products on the market. Please read through this USER'S MANUAL before operation to ensure proper usage, and keep for future

## Table of Contents

Warnings and Caution.....	2
Safety Instructions.....	3
Table of Contents.....	4
Included Accessories.....	4
Receiver/Display panel Descriptions.....	5
Microphone Descriptions/Operation/Channel Switching.....	6
Installation & IR SYNCing(channel switching).....	7
Troubleshooting.....	8
Features & Specifications.....	9
Manufacturer Information.....	10

## Parts checklist

Before installing your wireless microphone, Here are a few things you should do/know:

- Handheld microphone(2)
- Mounting brackets(1 Set)
- AC power adapter(1)
- UHF-1208X receiver (1)
- 3 ft. male to male 1/4" cable (1)
- Antenna(2)
- User manual / warranty card

\*Be sure to keep original packaging in case of re-shipping is needed.

## Matters Need Attention

- 1)Check to see whatever the local voltage accord with operating receiver voltage(Wrong selection may lead to burn out of receiver)
- 2)Do not dismantle the machine on your own. For internal repair, please contact the local distributor or accepted service center. Please see page 10 for more detail.
- 3)When the machine will not be used for a long time, please disconnect the power plug from receiver.
- 4)Do not recharge your batteries until the batteries are low.

## Cleaning

- Please make sure the power is disconnected before cleaning or repairing the machine.
- The machine can be cleaned by using a soft cloth with water. Dry the machine with a dry cloth and let it air dry for 15 minutes.
- Please do not use volatile gasoline, diluents or other chemicals to cleaned the machine



# Receiver Descriptions



1) Power switch - Turns the UHF - 1208X on and off.

2) RF & AF indicator- RF indicator shows radio frequency signal level which receiver is getting. AF indicator shows the audio frequency signal level from the microphone.

If receiver catches microphone's signal, the RF & AF indicator will show the signal level  
3) Channel A display panel - Display all information like the frequency channel of the microphones, channel scanning information, or channel lock/unlock

4) Channel A volume control knob - Adjust the volume on the microphone A.

5) Channel A operating buttons:

IR SYNC/UP button: press twice in the roll to start IR Syncing process. turn on the microphone and press the microphone button again shortly to complete the channel matching between receiver and microphone. Or you can use this button as UP button in MENU mode.

STOP/MENU button: use this button to stop channel scanning, the receiver will automatically select the best/cleanest channel from all channels scanned. You can also use this button to enter MENU mode: In MENU mode, there are four categories:

1. Frequency: use UP or Down button to manually select receiver channel.


2. Scan: use to start auto channel scanning process. usually will need about 90 seconds to complete the process. after scanning, receiver will pick the best channel.

3. IR: to start IR sync (channel matching) process between receiver and microphone.

4. LOCK: to lock or unlock the buttons on the receiver. keep the distance between microphone and receiver IR launcher with-in 1 meter, then press the button on the microphone . If IR sync successes, the CH in the LCD screen will stop flashing and you can see the RF signal bar on the LCD screen.

5) IR launcher - submit matching signal to the receiver on the button of the microphone in order to make microphone match the same channel with this receiver .

## Rear panel descriptions

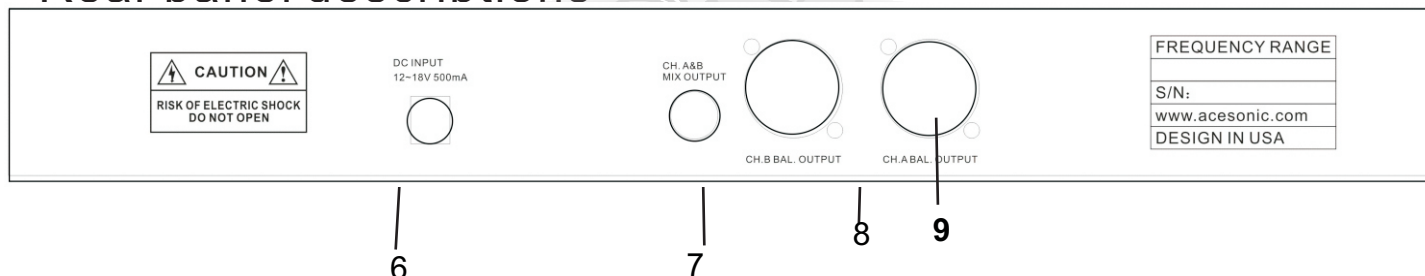


6) 12V AC power connection- Main power jack to power the system. Conect to wall outlet.

7) Channel A & B Mix unbalance audio output jack - Output jack that are used for connecting to amplifier, mixer or karaoke player. Will send both Channel A & B sound.

8) Channel A balance audio output jack - Output jack that are used for connecting to amplifier, mixer or karaoke player. Will only send Channel A sound.

9) Channel B balance audio output jack - Output jack that are used for connecting to amplifier, mixer or karaoke player. Will only send Channel B sound.

# Microphone Descriptions

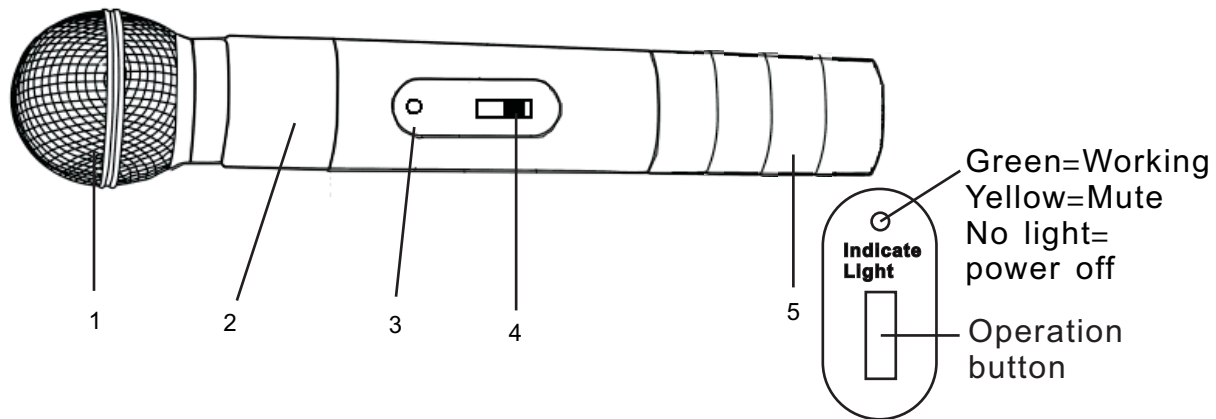

- 1)**Cartridge module**- This is where you would sing into.
- 2)**Microphone body**- The main frame of the microphone.
- 3)**Operating indicator** and 4)**Switch button**-

Hold the switch button for 1 second to turn on the power. Light will turn green means microphone is now in working condition.

When it lights up green, then press switch button shortly, the light will turn yellow, means microphone is in mute mode, no sound will come out from microphone. To go back to working mode, press the switch button shortly again, the light will turn green.

When IR syncing, microphone needs to stay power on, but can be either working or mute mode. After switching channel on the receiver and start IR syncing. Then put the button part of the microphone to face the IR launcher on the receiver, the distance needs to be under 1 meter. Press the microphone switch button shortly to confirm the IR syncing. If IR sync succeeds, the CH in the LCD screen will stop flashing and you can see the RF signal bar on the LCD screen.


5)**Battery cover & IR receiver**- This is the base of the microphone where you would hold it. It is also a battery cover. The bottom part has an IR receiving unit inside which receives the IR signal from the receiver to complete the IR matching for microphone and receiver.

## Microphone Operation & Channel switching):

- 1) Install batteries into microphone handheld.
- 2) Turn on microphone by pushing the switch towards, the indicator should turn green.
- 3) To mute the microphone, push the switch button shortly, the light will turn yellow.
- 4) To turn off the microphone, push the switch button for about 1~2 seconds then release it, the indicator light will turn off.
- 5) If you are not going to use the microphone for a long period of time, turn off the microphone and pull out the batteries to avoid deterioration and damage toward the components.
- 6) When IR syncing, microphone needs to stay power on, but can be either working or mute mode. After switching channel and start IR syncing on the receiver. Put the button part of the microphone to face the IR launcher on the receiver, the distance needs to be under 1 meter. Press the microphone switch button shortly to confirm the IR syncing. If IR syncing got confirmed, the channel information on the LCD of receiver will stop flashing and you can see the RF signal bar on the LCD screen.

**\* For quick microphone channel matching process, please see the note on the top of receiver, or see page 7 for more detail**

# Installation

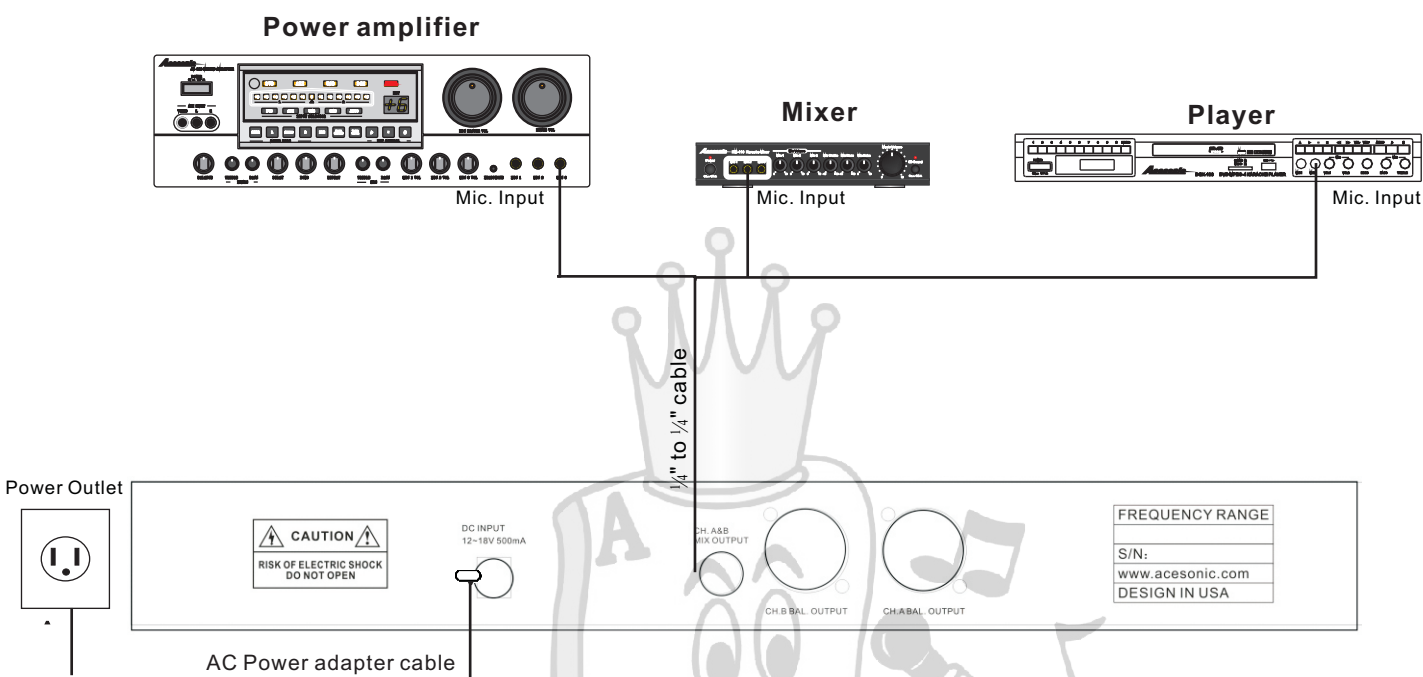

- 1) Connect the **AC POWER ADAPTER** to the UHF-1208X receiver's **AC INPUT 110V**, then plug the other end of **AC POWER ADAPTER** into the **WALL OUTLET**.
- 2) Connect one end of a **1/4" TO 1/4" CABLE** to the UHF-1208X receiver's **UNBALANCE AUDIO OUTPUT (MIX)** and the other end to a karaoke mixer, karaoke player or karaoke power amplifier **1/4"** microphone input. If you are using the **BALANCE AUDIO OUTPUT**, use a **XLR to XLR cable** or **XLR to 1/4" cable**.
- 3) Unscrew the microphones handle cover (counter-clockwise) to check to see if there are batteries. If not, install batteries into the microphones with the negative and positive end of the battery correspond the negative and positive end of the microphone. Screw the microphone handle back on (clockwise).

## Quick IR SYNC (Channel Matching between receiver and microphone)

1. On the receiver, press **MANUAL SCAN** button twice in the roll to start auto channel scanning process. The whole auto scanning process will be finished around 90 seconds. However, you can stop auto scanning anytime by pressing **STOP** button. Receiver will select the best/cleanest channel from the channels just went thought.
2. Power on the microphone handheld and use its button part to face the **IR SYNC** laugher on the receiver front panel to prepare the next step (IR syncing).
3. On the receiver, press **IR SYNC** button twice in the roll to start IR syncing process. When the receiver LCD screen shows **IRING**, press microphone button and release shortly. If **IR SYNC** success, the LCD screen will show **IR OK**.
4. Please remain the 1st microphone power on before starting the 2nd microphone's auto channel scanning. otherwise receives might get the same (cleanest) channel for both #1 and #2 microphone while auto channel scanning.

# Troubleshooting

If you are having problems operating the UHF-1208X, or suspect something is wrong with the unit, please check the troubleshoot list below to see if the issue is a result of incorrect operation rather than equipment malfunction. If you are still unable to resolve the problem, please contact our Acesonic service center at 626-820-0670.

Problem	Possible cause	Solution
<b>Reciver</b>  No sound; No lights	<ul style="list-style-type: none"> <li>●Power button is on the OFF position</li> <li>●AC power adater is not plug in</li> <li>●Poor connection of AC power adapter</li> <li>●How to switch from different channels?</li> </ul>	<ul style="list-style-type: none"> <li>●Turn on the power button</li> <li>●Plug in the AC power adapter</li> <li>●Check to see if the AC power adapter is loose. Check on the receiver end and wall outlet end</li> <li>●See page 6 and 7 for more detail</li> </ul>
<b>Microphone</b>  No sound; Lights on	<ul style="list-style-type: none"> <li>●The transmitter is out of range</li> <li>●Microphone switch is off or mute</li> <li>●Microphone volume is turn down</li> <li>●Batteries in the microphone are not install properly</li> <li>●The antenna is not fully functional.</li> <li>●Receiver is not connect to an amplifier, mixer or karaoke player</li> </ul>	<ul style="list-style-type: none"> <li>●Operate the machine in the effective range</li> <li>●Turn on the microphone switch (indicated green light)</li> <li>●Turn on the microphone volume on the receiver</li> <li>●Reinstall the batteries. Make sure the positive and negative end are install correctly</li> <li>●Try to change the angel of the antenna</li> <li>●Connect the ¼ to ¼ or XLR cable from the receiver to a microphone input (mixer, player, etc.). See Page 7 for detail</li> </ul>
Distorted sound; feedback	<ul style="list-style-type: none"> <li>●The two microphones are too close together</li> <li>●Batteries running low in microphone</li> <li>●Microphone volume is too high</li> <li>●Distortion from other electric wave</li> </ul>	<ul style="list-style-type: none"> <li>●Separate the microphone further away</li> <li>●Recharge the batteries</li> <li>●Reduce the volume of the microphone</li> <li>●Move the reliever away from electric equipment or change the frequency channel</li> </ul>
Outside noise	<ul style="list-style-type: none"> <li>●Radio frequency got occupied by other radio device.</li> </ul>	<ul style="list-style-type: none"> <li>●Change the channel on receiver and IR syncing between receiver and microphone. See P.6~7 also</li> </ul>

**\* For quick microphone channel matching process, please see the note on the top of receiver, or see page 7 for more detail**



# Features and Specifications

## Features:

- Professional Heavy duty rack mountable receiver, UHF diversity wireless system
- Almost zero noise output when on standby, high signal/noise ratio, super low distortion.
- 1000 switchable channels, with auto channel selection function.
- Dual channel information LCD display and individual microphone volume control.
- Perfect operative status signals, fluorescence display, with digital microphone.
- Long practical distance. Over 100 m in ideal circumstance ,25 m radius in complex circumstances.
- Easy IR syncing for quick channel matching between receiver and microphone.
- Front antenna provides clear radio frequency reception.

## Specifications:

### Receiver

**Carrier Wave Frequency Range:** UHF 668~692 MHz

**Oscillation Mode:** Phase-locked Loop controlled

**Carrier Wave Stability:** 10PPM

**Switching bandwidth:** 24MHz

**Frequency Space:**  $\geq 250\text{KHz}$

**Sensitivity:** -105dB @ sinad=12 dB

**S/N Ratio:** >105dB

**T.H.D.:** <0.5% @ 1KHz

**Image rejection:** 85 dB typical

**Spurious rejection:** 75 dB typical

**Frequency Responses:** 40Hz~18KHz

**Working distance:** 200 feet (open area)

**Squelch Control:** dual-squelch circuit

**AF Output Impedance:** 2.2K $\Omega$

**Max. Output Level:** Balance : 0—400mv , Unbalance : 0—200mv

**Display:** 2 x LCD

**Power Supply:** External DC Power Supply, 0.5A, 12~18V DC

**Output Connector:** 2x XLR Balanced Socket. 1x Unbalance TRS  $\odot$  6.35mm Socket

**Dimensions (m/m):** 420(L)  $\times$  45(H)  $\times$  200(D)

**Weights (Kg):** 2.5

### Transmitter

**Transmitter power:** 30mW

**Spurious emission:** <40dB(with carrier)

**Display:** LED

**Battery voltage:** 1.5v  $\times$  2

**Battery life:** Vary by using behavior and batteries capacity.

## Manufacturer Information

## Contact Info:

1 Year Manufacturer Warranty  
Lifetime Tech. Support  
( 626 ) 820 - 0670  
Design in U.S.A

**Tech. Support: ( 626 ) 820-0670**

**Address:** 161 S. 8th Avenue  
City of Industry,  
CA 91746-3208, USA

**Website:** [www.acekaraoke.com](http://www.acekaraoke.com)

**Note:**

